

My air conditioner is not working?

Check fuses or circuit breakers. Also check that it is plugged in properly.